

Commonly Used Erosion Controls



Residential Construction Entrance / Exit

RECOMMENDED PURPOSE:

Protect adjoining roads and waterways from Vehicular tracking of sediment off of the site.

INSTALLATION STEPS:

1. Install as soon as vehicle traffic will be entering and exiting the site.
2. Install geotextile fabric over subgrade prior to placing crushed rock.
3. Use $\frac{3}{4}$ minus clean rock or larger.
4. Construct entrance a minimum of 20 feet wide and extend from the roadway to the foundation or a minimum of 20'.
5. Maintain a minimum 8" rock depth. Monitor for tracking of sediment offsite and make corrections as necessary.

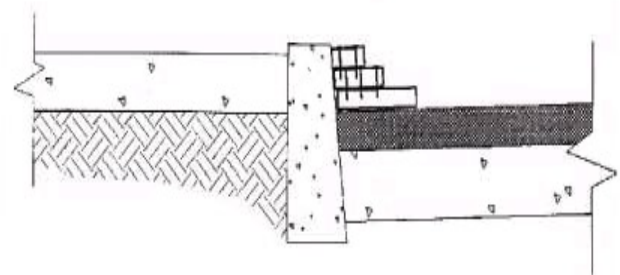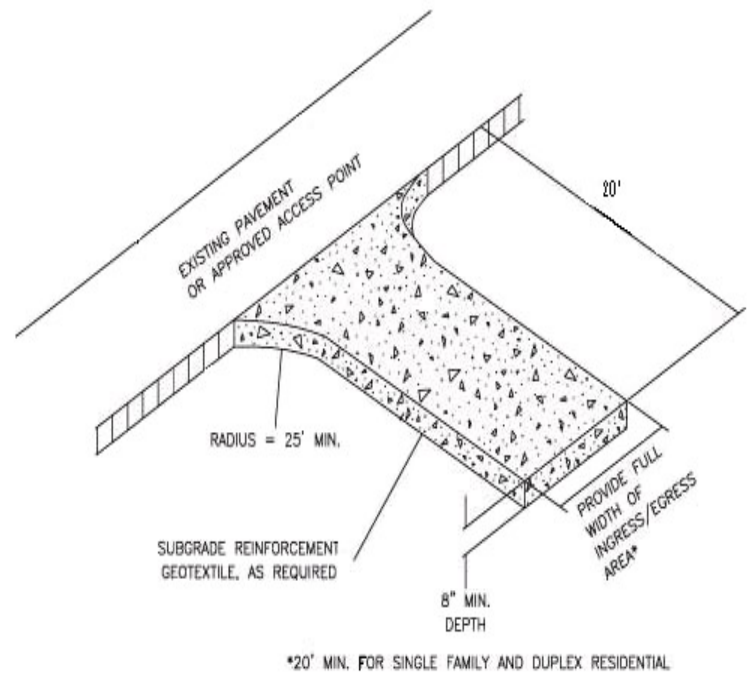

NOTES:
DIMENSIONS
SINGLE FAMILY
20' LONG BY 20' WIDE
8" DEEP OF $\frac{3}{4}$ " MINUS CLEAN ROCK.

For More Information:

City of Springfield
Development & Public
Works - Engineering
225 Fifth Street
Springfield, OR 97477
Phone: (541)726-5931
(541) 736-1037
www.springfield-or.gov