

## Commonly Used Erosion Controls



### Residential Construction Entrance / Exit

#### RECOMMENDED PURPOSE:



*Protect adjoining roads and waterways from Vehicular tracking of sediment off of the site.*

#### INSTALLATION STEPS:

1. Install as soon as vehicle traffic will be entering and exiting the site.
2. Install geotextile fabric over subgrade prior to placing crushed rock.
3. Use  $\frac{3}{4}$  minus clean rock or larger.
4. Construct entrance a minimum of 20 feet wide and extend from the roadway to the foundation or a minimum of 20'.
5. Maintain a minimum 8" rock depth. Monitor for tracking of sediment offsite and make corrections as necessary.

#### For More Information:

City of Springfield  
**Development & Public  
Works - Engineering**  
225 Fifth Street  
Springfield, OR 97477  
Phone: (541)726-5931  
(541) 736-1037  
[www.springfield-or.gov](http://www.springfield-or.gov)

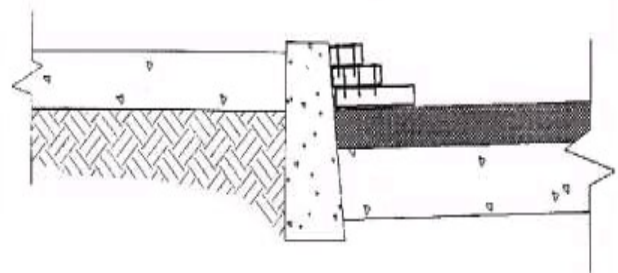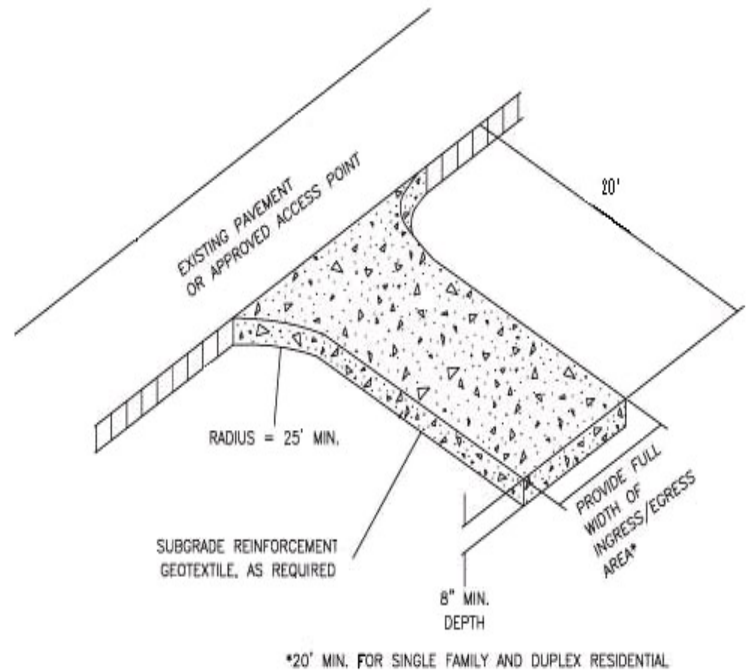

NOTES:  
DIMENSIONS  
SINGLE FAMILY  
20' LONG BY 20' WIDE  
8" DEEP OF  $\frac{3}{4}$ " MINUS CLEAN ROCK.