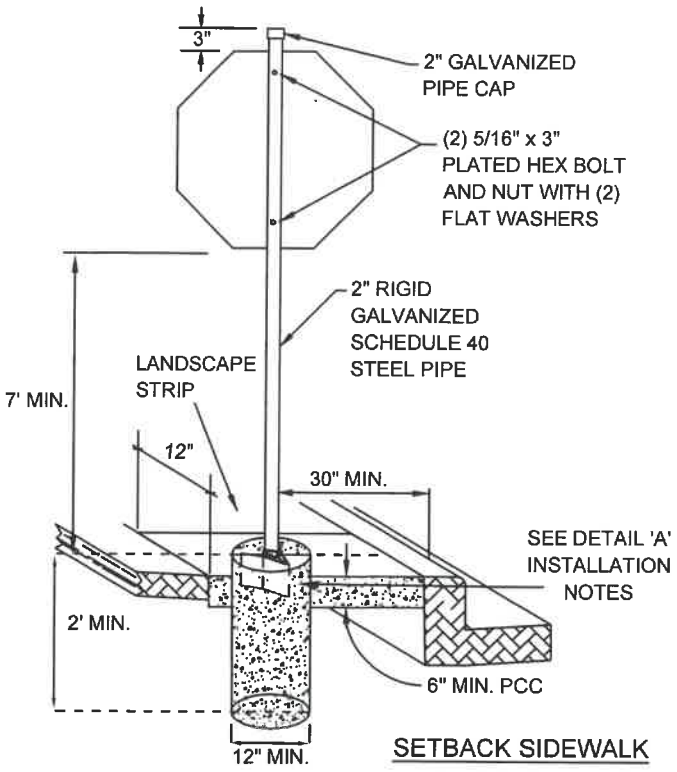

SETBACK SIDEWALK SIGN INSTALLATION

MOUNTING DETAILS FOR TWO SIGNS

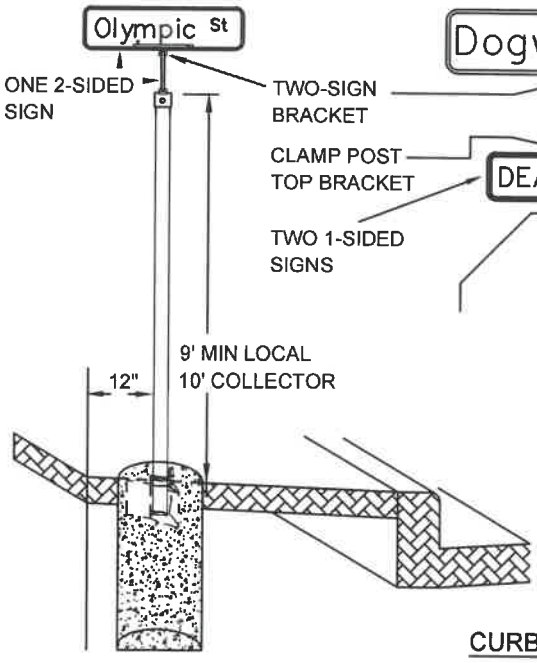

MOUNTING DETAILS FOR THREE SIGNS

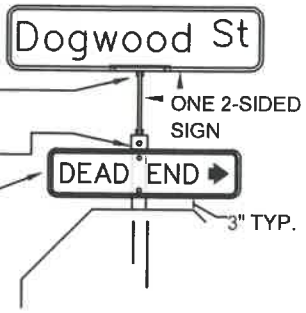

CURBSIDE SIDEWALK SIGN INSTALLATION

DETAIL 'A'
ANCHOR SOCKET INSTALLATION NOTES

1. CARE SHALL BE TAKEN THAT NO CONCRETE IS PLACED WITHIN ANCHOR SOCKET. USE BOTTOM PLATE SOCKET MODEL OR TAPE UNDER OPENING TO PREVENT UPWARD MIGRATION OF CONCRETE.
2. INSERT WEDGE WITH SIDE HOLE CLOSEST TO THE TOP FOR MAINTENANCE REMOVAL

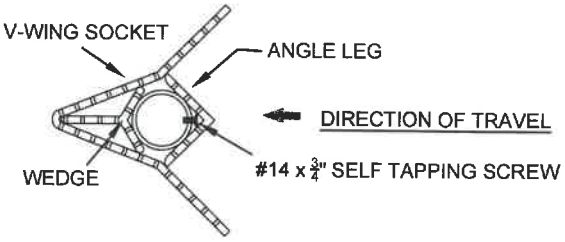

NOTES

- INSTALL ALL SIGNS WITH VANDAL RESISTANT SCREWS
- ALL EYEBOLTS, BOLTS, NUTS, AND WASHERS SHALL BE GALVANIZED STEEL UNLESS NOTED OTHERWISE, ALL SET SCREWS SHALL BE MIN. DIA. 1/4" STAINLESS STEEL WITH SQUARE OR HEX HEADS.
- BEFORE INSTALLING A SIGN BASE CONTACT CITY TRAFFIC TO REQUEST A MARKED SIGN LOCATION. CALL (541) 726-3697
- DRAWING NOT TO SCALE

REGISTERED PROFESSIONAL ENGINEER
19687PE
OREGON
MAY 5, 1998
BRIAN F. BARNETT
4/28/26

EXP DATE: 12-31-2027

SPRINGFIELD OREGON

ROADSIDE SIGN INSTALLATION

NO	REVISION	DATE	BY	APPR.
1	CITY DWG. 5-18			
7	DRAWING UPDATE	09/2025	TB	
8	MOUNTING DETS.	04/2026	TB	

STANDARD DRAWING
5-18
2026

K:\SPR_GIS\DATA\TrafficCAD\STANDARD_DRAWINGS\Springfield Traffic Standards\TSD5_18-R8-TB.dwg

April 21, 2026